


Cross beam adaptors - T4

Accessories:




Center pick up points:

Standard (in mm)

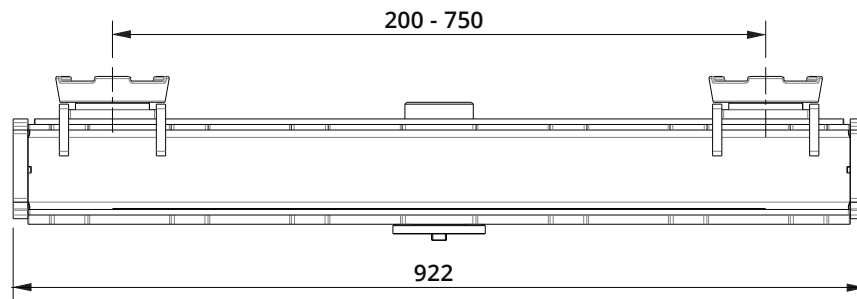


Wide (in mm)

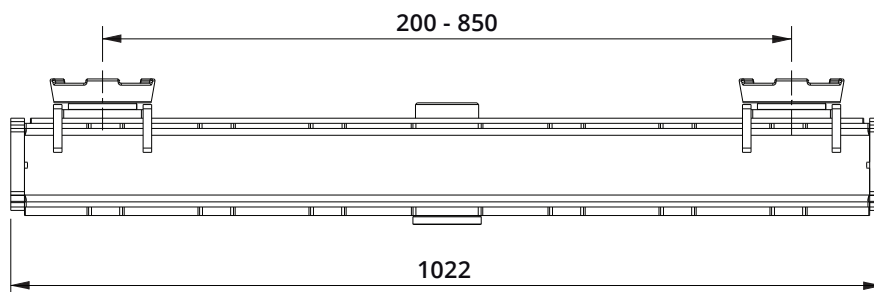


T4-1 / T4-1W

Both saddles slide independently

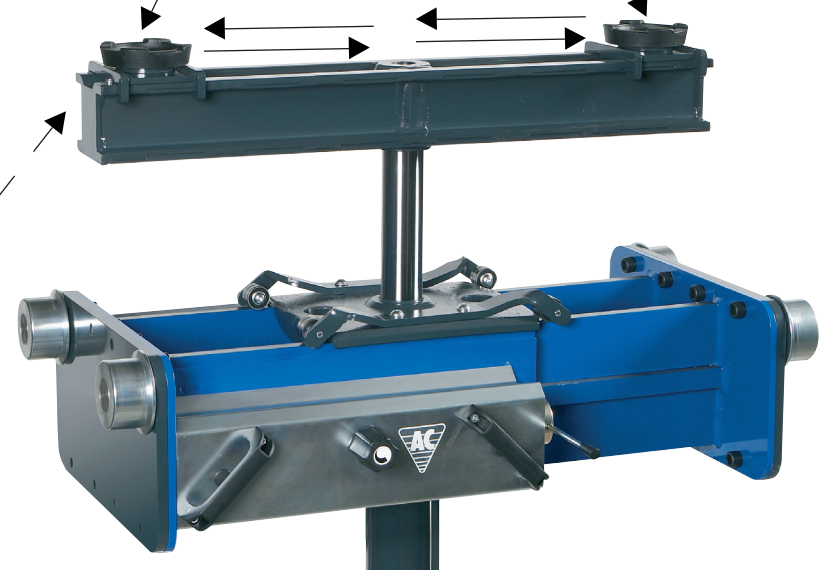

T4-2 / T4-2W

Both saddles slide independently

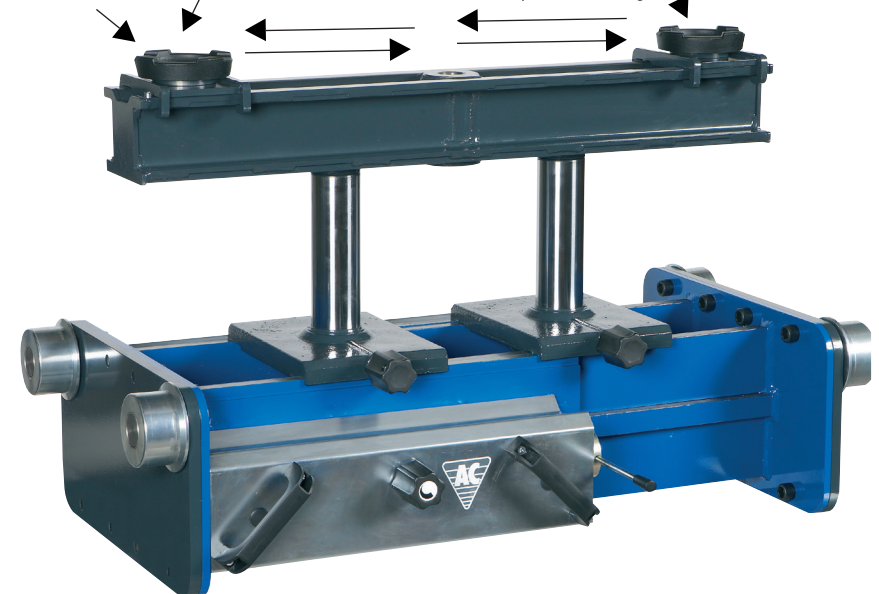

Cross beam adaptors - T5

Accessories:

FG200

200 mm
Extensions



Chassis saddle

FW2-90 (90 mm)
FW2-130 (130 mm)



Axle saddle

US-100 (100 mm)
US-200 (200 mm)





FG100

100 mm
Extensions



Center pick up points:

Standard (in mm)

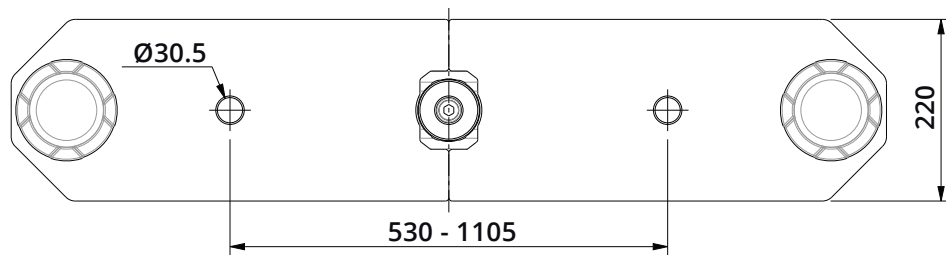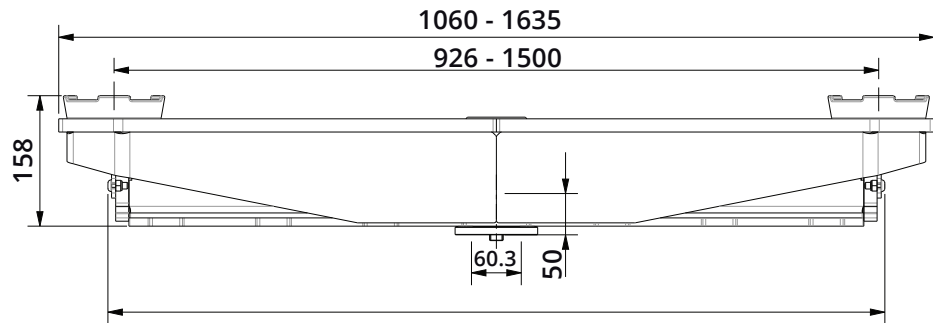

T5-1 Cross beam


Both halves with saddles slide out independently




T5-2 Cross beam closed



T5-2 Cross beam open

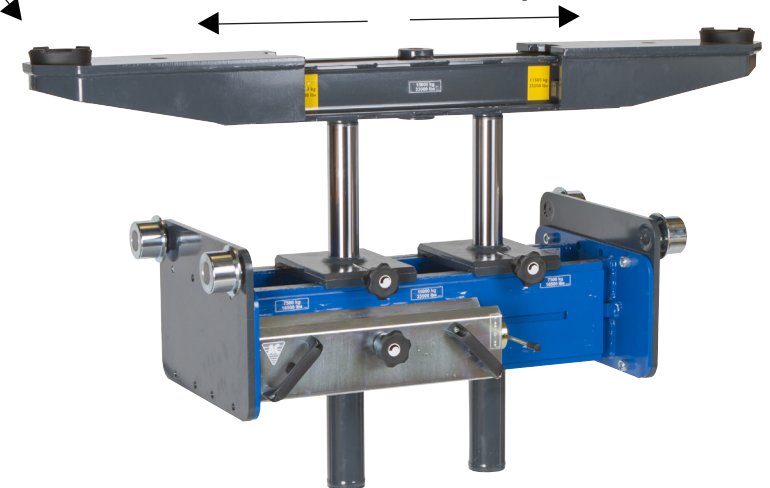

Accessories:

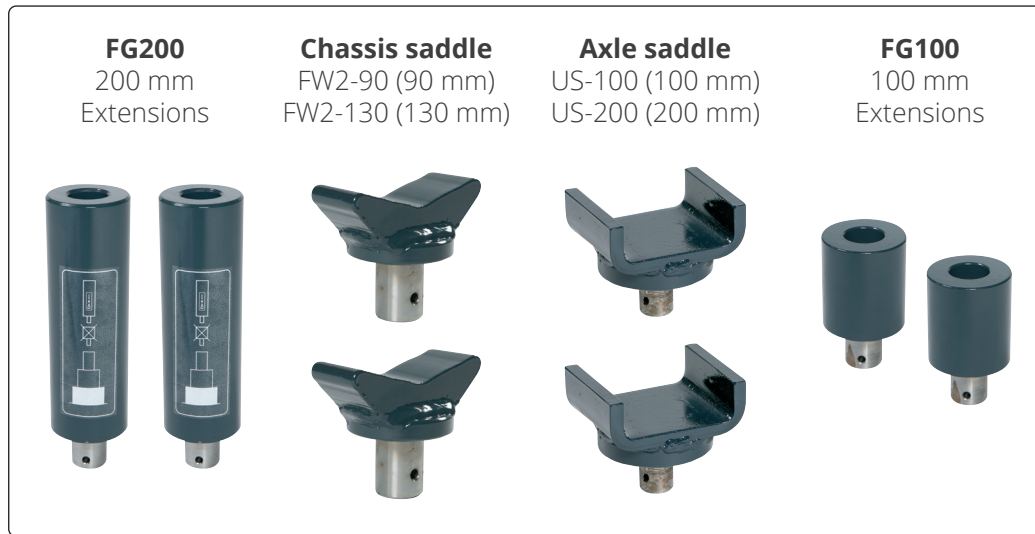


Center pick up points:

Standard (in mm)


Max. 1348 min. 848

Max. 1225 min. 725

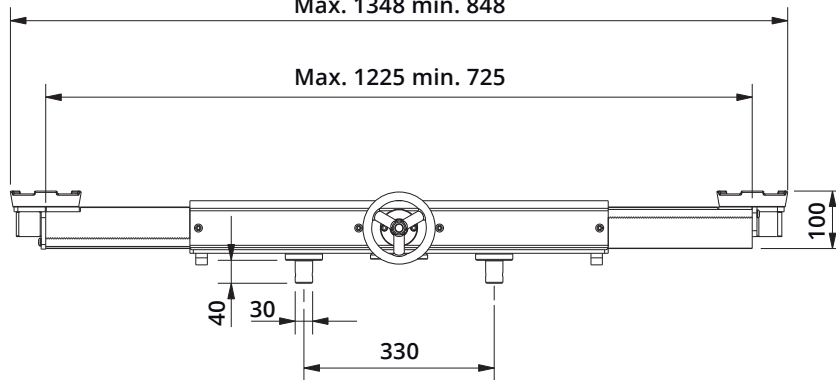


Wide (in mm)

1123 - 1723

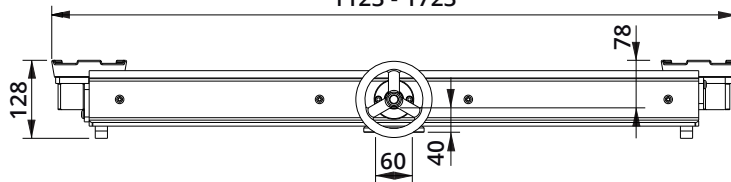

T6-1 Cross beam closed

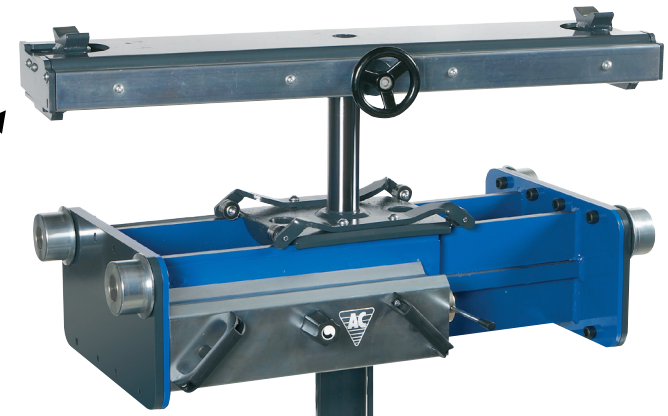

T6-2 Cross beam open

Turn wheel and both saddles move in & out simultaneously

